

Operating and installation instructions

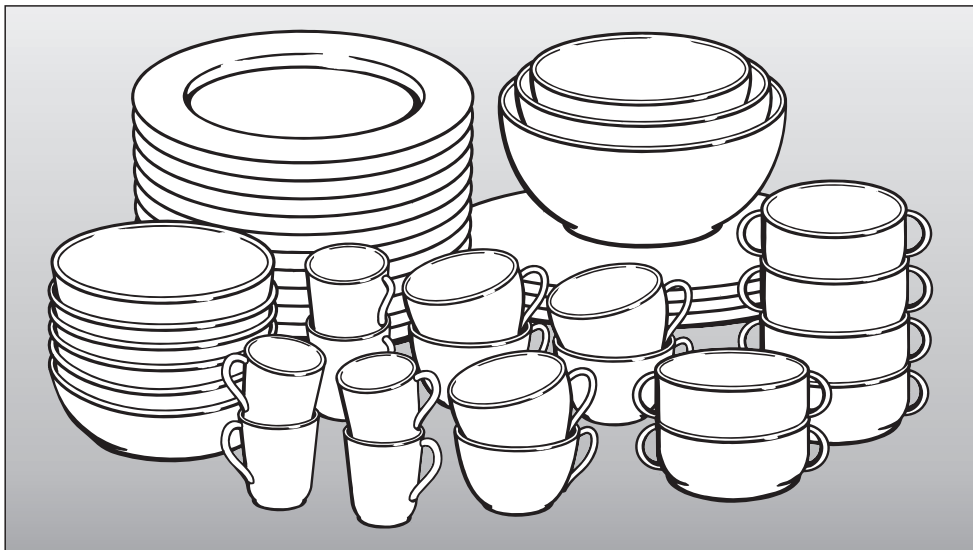


Plate warming drawer

EGW 5050-14

EGW 5060-14


To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - GB, ZA

M.-Nr. 07 517 010

Contents

Guide to the appliance	3
Warning and Safety instructions	4
Caring for the environment	11
Before using for the first time	12
Operation	13
Controls	13
Brief operating instructions	14
Selecting a temperature	14
Heating up times	15
Capacity	16
Cleaning and care	17
Appliance front and interior	17
Anti-slip mat	18
Problem solving guide	19
Optional accessories	21
Safety instructions for installation	22
Building-in dimensions	23
Installing the appliance	27
Aligning the front of the plate warming drawer	28
Electrical connection	29
After sales service, data plate	31

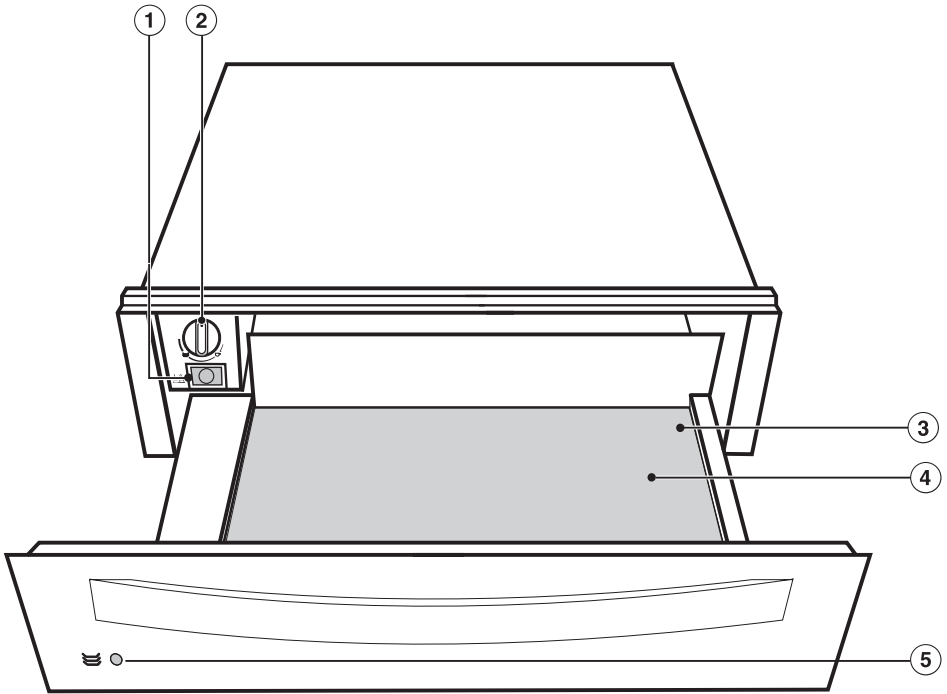

- ① On/Off switch (lights up)
- ② Temperature control
- ③ Warming drawer
- ④ Anti-slip mat
- ⑤ In-operation indicator

Warning and Safety instructions

This appliance complies with all relevant safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before installation and before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Correct application

- ▶ The appliance is not designed for commercial use. It is intended for use in domestic households and similar working and residential environments.
- ▶ The appliance is not intended for outdoor use.
- ▶ It is intended for domestic use only as described in these operating and installation instructions.
Any other usage is not supported by the manufacturer and could be dangerous.
- ▶ The appliance can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they are supervised whilst using it, or have been shown how to use it in a safe way and understand the hazards involved.

Warning and Safety instructions

Safety with children

- ▶ Children under 8 years of age must be kept away from the appliance unless they are constantly supervised.
- ▶ Children 8 years and older may only use the appliance if they have been shown how to use it in a safe way and understand the hazards involved.
- ▶ Children must not be allowed to clean the appliance unsupervised.
- ▶ This appliance is not a toy! To avoid the risk of injury, do not let children play with the appliance or its controls.
- ▶ The appliance gets hot when in use and remains hot for quite a while after being switched off. Keep children well away from the appliance until it has cooled down and there is no danger of burning.
- ▶ Packaging, e.g. cling film, polystyrene and plastic wrappings, must be kept out of the reach of babies and children. Danger of suffocation. Dispose of or recycle all packaging safely as soon as possible.

Technical safety

► Installation, maintenance and repair work may only be carried out by a suitably qualified and competent person in strict accordance with national and local safety regulations. Installation, maintenance and repairs by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work.

► A damaged appliance can be dangerous. Before installation, check the appliance for visible signs of damage. Do not use a damaged appliance.

► The electrical safety of this appliance can only be guaranteed when correctly earthed. It is most important that this basic safety requirement is observed and regularly tested, and where there is any doubt, the household wiring system should be inspected by a qualified electrician.

► To avoid the risk of damage to the appliance, make sure that the connection data (frequency and voltage) on the data plate corresponds to the household supply, before connecting the appliance to the mains supply.
Consult a qualified electrician if in any doubt.

► Do not connect the appliance to the mains electricity supply by a multi-socket adapter or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

► For safety reasons, this appliance may only be used when it has been built in.

► This appliance must not be used in a non-stationary location (e.g. on a ship).

Warning and Safety instructions

- ▶ Do not open the casing of the appliance.
Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.
- ▶ While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by Miele. Otherwise the guarantee is invalidated.
- ▶ The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used. Faulty components must only be replaced by genuine Miele original spare parts.
- ▶ If the plug is removed from the connection cable or if the appliance is supplied without a plug, the appliance must be connected to the electrical supply by a suitably qualified electrician.
- ▶ If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a specialist connection cable of type H 05 VV-F (pvc insulated), available from Miele.
- ▶ The appliance must be disconnected from the mains electricity supply during installation, maintenance and repair work. Ensure that power is not supplied to the appliance until after it has been installed or until any maintenance or repair work has been carried out.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Correct use

- ▶ You could burn yourself on the hot drawer or crockery. Protect your hands with heat-resistant pot holders or gloves when handling hot dishes. Do not let them get wet or damp, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.
- ▶ Do not store any plastic containers or inflammable objects in the warming drawer. They could melt or catch fire when the appliance is switched on, causing a fire hazard.
- ▶ Due to the high temperatures radiated, objects left near the appliance when it is in use could catch fire. Do not use the appliance to heat up the room.
- ▶ Never replace the anti-slip mat supplied with the appliance with paper kitchen towel or similar.
- ▶ If you overload the drawer, or sit or lean on it, the telescopic runners will be damaged. The telescopic runners can support a maximum load of 25 kg.
- ▶ If the appliance is installed behind a kitchen furniture door, it may only be used with the furniture door open.
Only close the door if the appliance is switched off.
- ▶ Moisture in food or drinks could cause corrosion damage to the drawer. Do not use the warming drawer to re-heat, cook or keep food or drinks warm.

Warning and Safety instructions

Cleaning and care

► Danger of injury.

Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.


Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and should be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

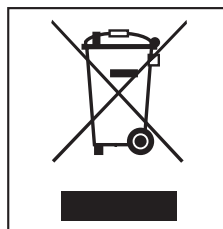

Please dispose of it at your local community waste collection/recycling centre or contact your dealer for advice. Please ensure that it presents no danger to children while being stored for disposal.

Before using for the first time

Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service, data plate" section of this booklet.

Cleaning and heating up for the first time

- Remove any protective foil and sticky labels.
- Remove the anti-slip mat from the drawer, and clean it with warm water and a little washing-up liquid. Dry using a soft cloth.
- Wipe the appliance inside and out with a damp cloth only, and then dry with a soft cloth.
- Replace the anti-slip mat in the drawer.
- Then heat the empty drawer for at least two hours. Set the temperature control to maximum (see "Selecting a temperature").

Metal components have a protective coating which may give off a slight smell when heated up for the first time.

The smell and any vapours will dissipate after a short time, and do not indicate a faulty connection or appliance.

Ensure that the kitchen is well ventilated whilst the appliance is being heated up for the first time.

This appliance uses a hot air warming system. Heat given off by a heating element is distributed evenly throughout the drawer by a fan. The circulating air ensures that crockery is heated evenly and quickly.

A protective grille protects you from touching either the fan or the heating element.

The base of the drawer is fitted with an anti-slip mat which stops crockery sliding about when the drawer is opened and closed.

Do not use the appliance to re-heat, cook or keep food or drinks warm. Condensation from the food or drinks could lead to corrosion in the appliance.


Always use heat-resistant gloves or oven gloves to remove heated crockery from the drawer.

The maximum load capacity of the appliance is 25 kg .

Controls


The controls consist of a temperature dial and an On/Off switch. They are only visible when the drawer is open.

When the drawer is shut, you can see from the in-operation indicator on the front of the drawer if the drawer is switched on.

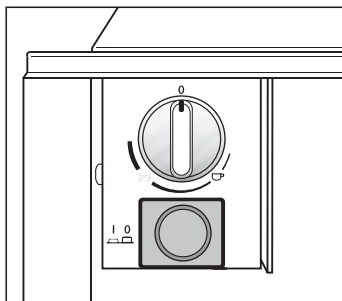

Operation

 
Brief operating instructions

- Place the crockery inside the drawer.
- Select the temperature required.
- Switch on the appliance ()

The switch lights up.

- Close the drawer.

 If you use too much force, it can spring open again.

- Switch the appliance off () before removing the heated crockery.



Selecting a temperature

The temperature dial allows you to select any temperature between approx. 30 and 80 °C.

The temperature dial must only be turned in a clockwise direction as far as it will go and then back again. Do not turn it too far as this will damage it.

When the selected temperature is reached, the heating element switches itself off. When the temperature falls below that selected, the heating element switches on again automatically.

The temperature scale around the dial is shown in symbols rather than in °C. The symbols represent the most suitable temperature for the type of crockery depicted:

-  approx. 40 °C
for cups or glasses.
Drinks poured into warmed cups do not cool down so quickly. At the same time, the cups will not get too hot to handle.
-  approx. 60 °C
for serving dishes and plates.
Food stays warm for longer if served in pre-heated dishes. The dishes will not get too hot to handle.

Heating up times

Various factors will affect the heating up times:

- The material and thickness of the crockery
- The amount of crockery
- How the crockery is arranged
- The temperature setting.

It is therefore not possible to state precise times.

However, the following information can be used as a guide:

Temperature setting ≡ is approx. 60 °C. Evenly heated crockery will take about:

- 30 - 35 minutes
for 6 place settings.
- 40 - 45 minutes
for 12 place settings.


As you use the plate warming drawer, you will get to know which setting suits your own needs best.

Operation

Capacity

The capacity of the drawer depends on the size and weight of your crockery.

Do not overload the drawer. The maximum load bearing capacity of the drawer is **25 kg**.

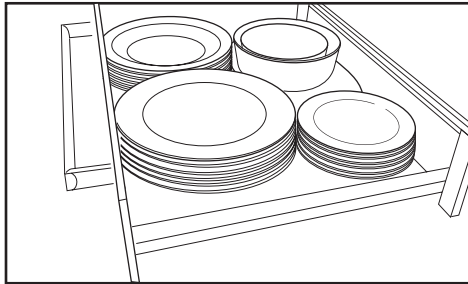

The loading examples shown here are suggestions only.

- 6 place settings:
 - 6 dinner plates Ø 26 cm
 - 6 soup bowls Ø 23 cm
 - 6 dessert plates Ø 19 cm
 - 1 oval serving dish 32 cm
 - 1 serving dish Ø 16 cm
 - 1 serving dish Ø 13 cm

or alternatively:

- 20 dinner plates Ø 26 cm
- 36 soup bowls Ø 23 cm
- 30 soup cups Ø 10 cm
- 10 dinner plates Ø 26 cm
- 10 soup bowls Ø 23 cm
- 8 pizza plates Ø 36 cm
- 120 espresso cups Ø 5.9 cm
- 54 cappuccino cups Ø 8.8 cm
- 30 punch glasses Ø 6.7 cm / 8.5 cm high

Always allow the appliance to cool down before cleaning.

Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.

Only use domestic washing-up liquid to clean this appliance; commercial cleaning products are not suitable, and may damage the appliance.

Appliance front and interior

Remove any soiling immediately.
If not, it might become impossible to remove and could cause the outer surfaces to alter or discolour.

Clean the front using a Miele microfibre E-cloth or with a clean sponge and a solution of hot water and washing-up liquid. Then dry with a soft cloth.

The outer surfaces of this appliance are all susceptible to scratching. Scratches on glass surfaces could even cause a breakage.

Contact with unsuitable cleaning agents can alter or discolour the outer surfaces.

Cleaning and care

To avoid damaging the surface of your appliance, do not use:

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- stainless steel cleaning agents,
- dishwasher cleaner,
- oven sprays,
- glass cleaning agents,
- hard, abrasive sponges and brushes, e.g. pot scourers,
- sharp metal scrapers.

Anti-slip mat


The anti-slip mat can be removed for cleaning.

- Clean the anti-slip mat by hand using warm water and a little washing-up liquid, and then dry with a cloth.

Do not put the anti-slip mat back into the drawer until it is completely dry.

Do not wash the anti-slip mat in a dishwasher or washing machine.

Never place the anti-slip mat in the oven to dry.

 Installation work and repairs to electrical appliances must only be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations (BS 7671 in the UK). Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

What to do if . . .

. . . the crockery is not warm enough.

Check whether

- the appliance has been switched on.
- the correct temperature setting has been selected.
- the vents have been blocked by large plates or bowls.
- the crockery has been allowed to heat up for a sufficiently long time.

Various factors will affect how long the crockery will take to heat up, for example:

- The material and thickness of the crockery
- The amount of crockery
- How the crockery is arranged
- The temperature setting.

The times quoted are only guidelines. As you use the plate warmer, you will get to know which setting suits your own needs best.

Problem solving guide

If any of the following problems occur, please contact the Miele Service Department.

. . . the crockery does not heat up.

Check whether

- you can hear the fan.
If you can hear the fan:
There is a problem with the heater element.
If you cannot hear the fan:
There is a problem with the fan.
- check whether the mains fuse has tripped.

. . . the crockery is too hot.

 
Check that the correct temperature has been set. If it has the temperature control is faulty.

. . . the On/Off switch does not light up when the appliance is switched on.

The indicator light for the switch is defective.


These can be ordered via the internet at www.miele-shop.com, or from Miele (see back cover for contact details).

Anti-slip mat



Anti-slip mat to keep crockery secure

 E-Cloth (microfibre cloth)



Removes finger marks and light soiling.

Safety instructions for installation


- ▶ Before connecting the appliance to the mains electricity supply make sure that the connection data on the data plate (voltage and frequency) correspond with the mains electricity supply, otherwise the appliance could be damaged. Consult a qualified electrician if in any doubt.
- ▶ The socket and on-off switch should be easily accessible after the appliance has been built in.
- ▶ The plate warmer may only be built in in combination with those appliances quoted by the manufacturer as being suitable. The manufacturer cannot guarantee trouble-free operation if the appliance is operated in combination with appliances other than those quoted by the manufacturer as being suitable.
- ▶ When building in the plate warmer in combination with another suitable appliance, the plate warmer must be fitted above a fixed interim shelf in the housing unit. Please ensure that the housing unit can support the weight of the plate warming drawer and that of the other appliance.
- ▶ As the combination appliance is placed directly on top of the plate warmer once it is built in, an interim shelf is not necessary between the two appliances.

When building in the combination appliance, it is essential to follow the instructions given in the operating and installation instructions supplied with the combination appliance.


All dimensions in this instruction booklet are given in mm.

Possible combinations

Ovens

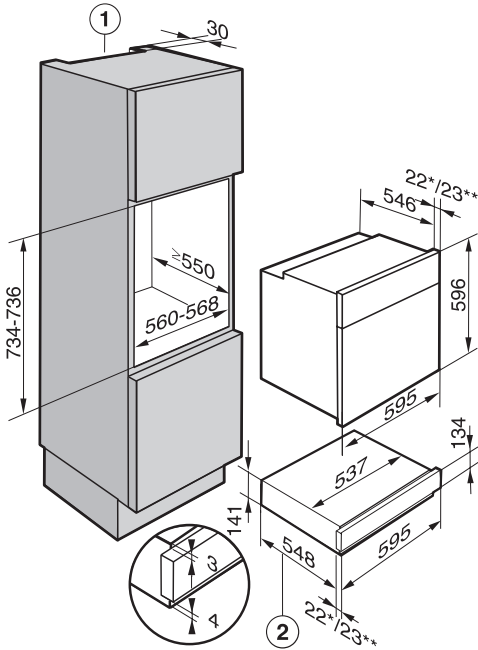

Microwave combi ovens

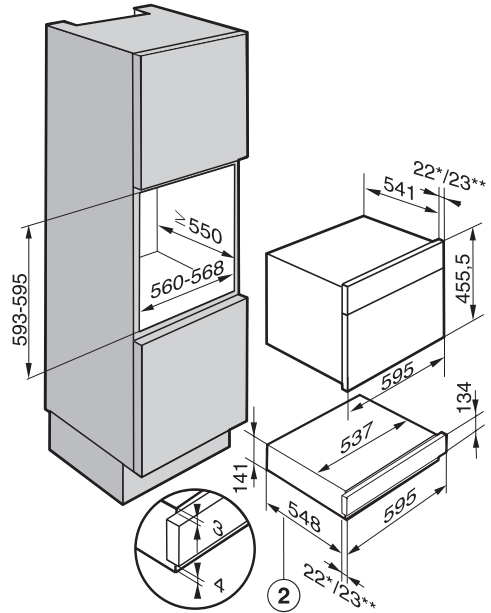


- ① Ventilation cut-out required when installed with a pyrolytic oven
- ② Building-in dimension including space for mains connection cable
Connection cable L = 2200 mm

* Appliances with glass front

** Appliances with metal front

Building-in dimensions


Steam ovens

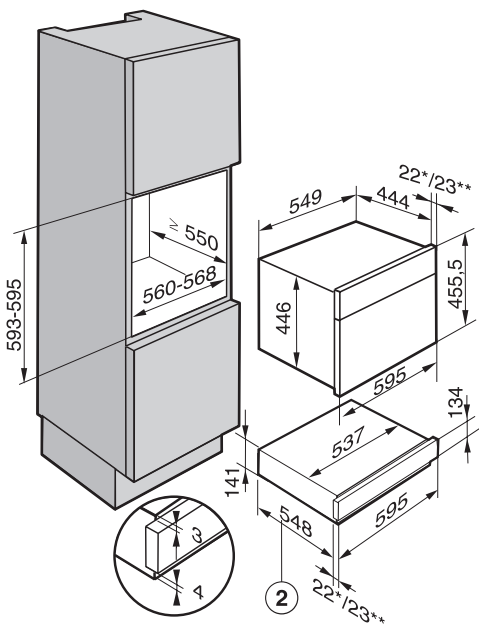

* Appliances with glass front

** Appliances with metal front

Steam combi ovens

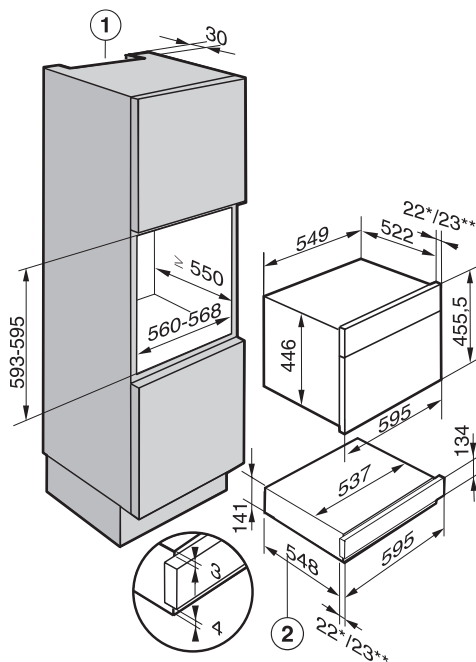


① Ventilation cut-out required when installed with a steam combi oven

② Building-in dimension including space for mains connection cable
Connection cable L = 2200 mm

Building-in dimensions

XL steam combi ovens

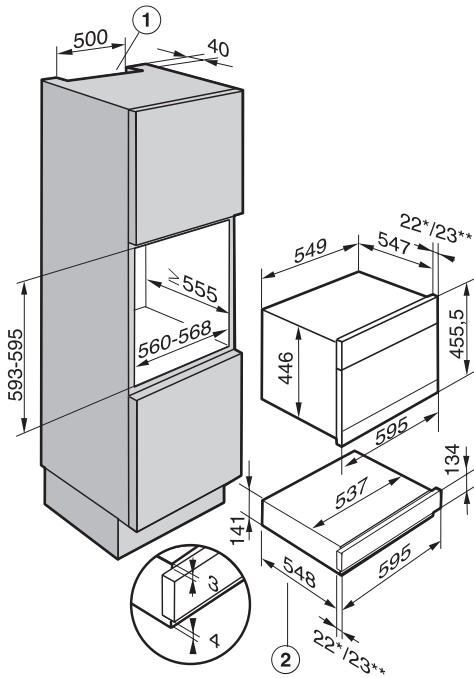


* Appliances with glass front

** Appliances with metal front

① Ventilation cut-out required when installed with an XL steam combi oven

② Building-in dimension including space for mains connection cable
Connection cable L = 2200 mm

Steam pressure oven

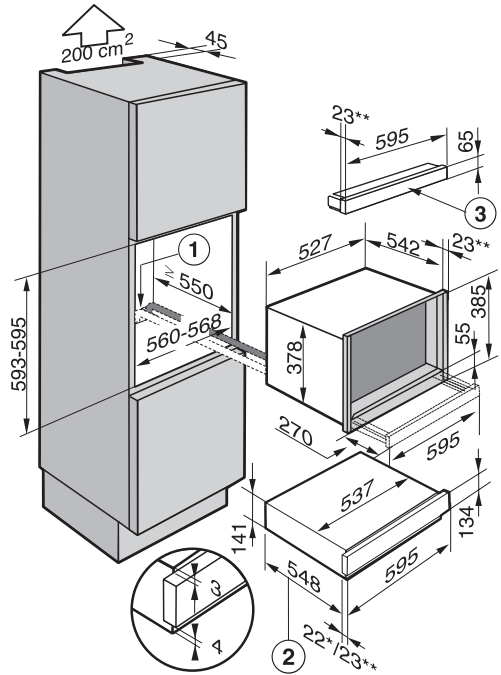


① Cut-out in the housing unit for feeding the water inlet and drain hoses through

② Building-in dimension including space for mains connection cable
Connection cable L = 2200 mm

③ Filler panel AB 45-7
(optional accessory)

Building-in dimensions

Coffee machines

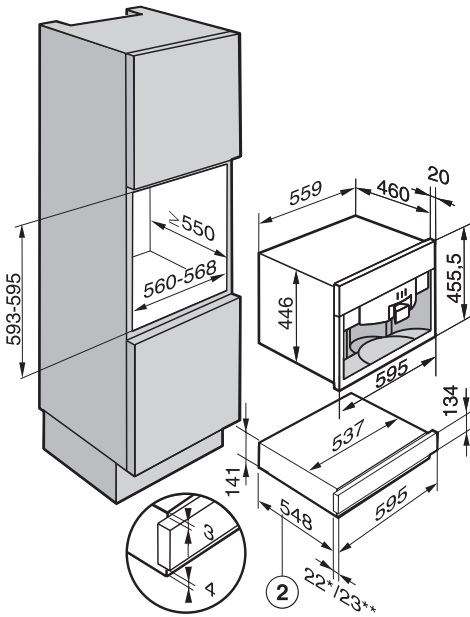

- ② Building-in dimension including space for mains connection cable
Connection cable L = 2200 mm


* Appliances with glass front

** Appliances with metal front

Installing the appliance

Ensure that the housing unit is aligned at a right angle.

- Push the appliance into the housing unit as far the vapour strip, and align it.
- Open the drawer, and use the 2 screws supplied to secure the appliance to the side walls of the housing unit.

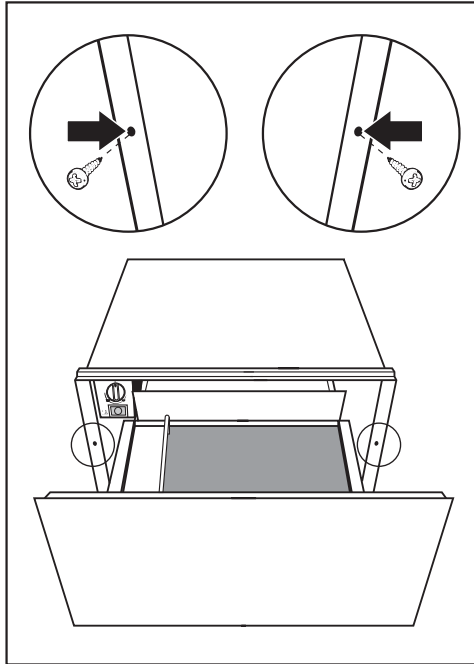


- Build in the combination appliance in accordance with its own specific operating and installation instructions.

Aligning the front of the plate warming drawer

After building in the combination appliance, it may be necessary under certain circumstances to

- align the front of the plate warming drawer.
- align the gap between the plate warming drawer and the combination appliance.

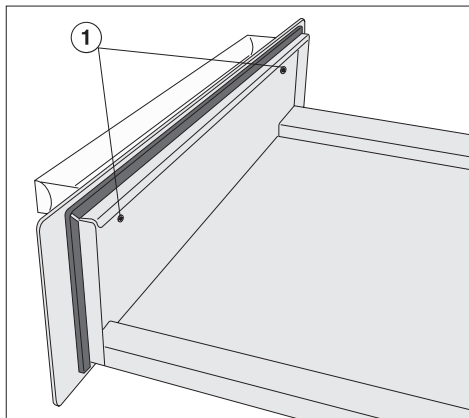

- Loosen the 2 screws securing the handle ① - but do not remove completely.
- Align the drawer front.
- Retighten screws ①.

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current local and national safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure power is not supplied to the appliance until after installation work has been carried out.

The appliance must only be operated when built-in. This is to ensure that all electrical parts are shielded. Live parts must not be exposed.

Do not connect the appliance to the mains electricity supply via an extension lead. These do not guarantee the required safety of the appliance.

Please ensure that the connection data quoted on the data plate match the household mains supply.

This appliance is supplied with a cable and moulded plug for connection to a suitable switched socket which should be easily accessible after installation.

It can, if necessary, be connected to a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations by a suitably qualified electrician.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to install a suitable residual current device.

When switched off there must be an all-pole contact gap of 3 mm in the isolator switch (including switch, fuses and relays).

Electrical connection

Important U.K.

This appliance is supplied for connection to a single phase 230-240 V 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

WARNING: THIS APPLIANCE MUST BE EARTHED

Non-rewireable plugs BS 1363

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

Important

The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system, which complies with local and national regulations. It is most important that this basic safety requirement is tested regularly and where there is any doubt the household wiring should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system such as electric shock.

The manufacturer cannot be held liable for damage caused by incorrect installation or connection.

After sales service, data plate

In the event of any faults which you cannot remedy yourself, or if the appliance is under guarantee, please contact:

– your Miele Dealer

or

 
– Miele (see back cover for address).

Please note that telephone calls may be monitored and recorded to improve our service.

When contacting Miele, please quote the model and serial number of your appliance, which are given on the data plate.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the front of these instructions.



United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: 0845 365 0555
Fax: 0845 365 0777
Customer Contact Centre Tel: 0845 365 6600
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: 1300 464 353, Fax: (03) 9764 7149
Internet: www.miele.com.au

China

Miele (Shanghai) Trading Ltd.
1-3 Floor, No. 82 Shi Men Yi Road
Jing' an District
200040 Shanghai, PRC
Tel: +86 21 6157 3500
Fax: +86 21 6157 3511
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay
Hong Kong
Tel: (852) 2610 1331
Fax: (852) 2610 1013
Email: mielehk@miele.com.hk

India

Miele India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi - 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

Manufacturer: Miele & Cie. KG
Carl-Miele-Straße 29, 33332 Gütersloh, Germany



Ireland

Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus, Dublin 24
Tel: (01) 461 07 10, Fax: (01) 461 07 97
E-Mail: info@miele.ie, Internet: www.miele.ie

New Zealand

Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

Singapore

Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

South Africa

Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: (011) 875 9000
Fax: (011) 875 9035
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae